Regular and thorough cleaning of your floor drain assures maximum operating efficiency. Here's what you need to know:



When to Clean Your Drain

It is time to clean your Rockford Separator when you notice a gradual slow down of the draining. With normal use, you should be able to establish a cleaning cycle. However if an abnormal event occurs, the drain should be serviced. A thorough and regular cleaning each time will assure maximum operating efficiency, and will extend the life of your drain.

How to Clean Your Drain

- 1. Remove all grates to gain full access to the internal parts of the drain.
- 2. Remove all parts, and clean, removing all oily waste and sediment that will accumulate on the bottom. DO NOT DISPOSE OF INTO THE SEWER.
- 3. Replace all parts. Call Rockford if your separator parts are in need of replacement. All parts are usually in stock.





- 1. Remove the grates and remove any loose fittings (if any) that were shipped inside.
- 2. Excavation for flush with grade installation shall be free of any materials that may damage the drain or its coatings. The drain shall be set being level and plumb, on a compacted material. Taking care not to damage the coatings. Coat any exposed fittings with an asphalt based coating, and to any damaged areas due to handling.
- 3. The equipment used to set the drain must be of adequate size capable of lifting the entire unit. Do not drag or drop into place or possible damage to the structure or its coatings may occur.
- 4. Connect the outlet per your local codes.
- 5. Any drain installed in traffic areas needs to be reinforced to withstand the anticipated loads.



